


PUSH BUTTON OVERVIEW STREAMER 1.4

This document is an overview to the ConnectLine functions available with Streamer 1.4
The overview can be used to explore or validate Streamer functionality

Abbreviations:

CL = ConnectLine

H.I. = Hearing Instrument

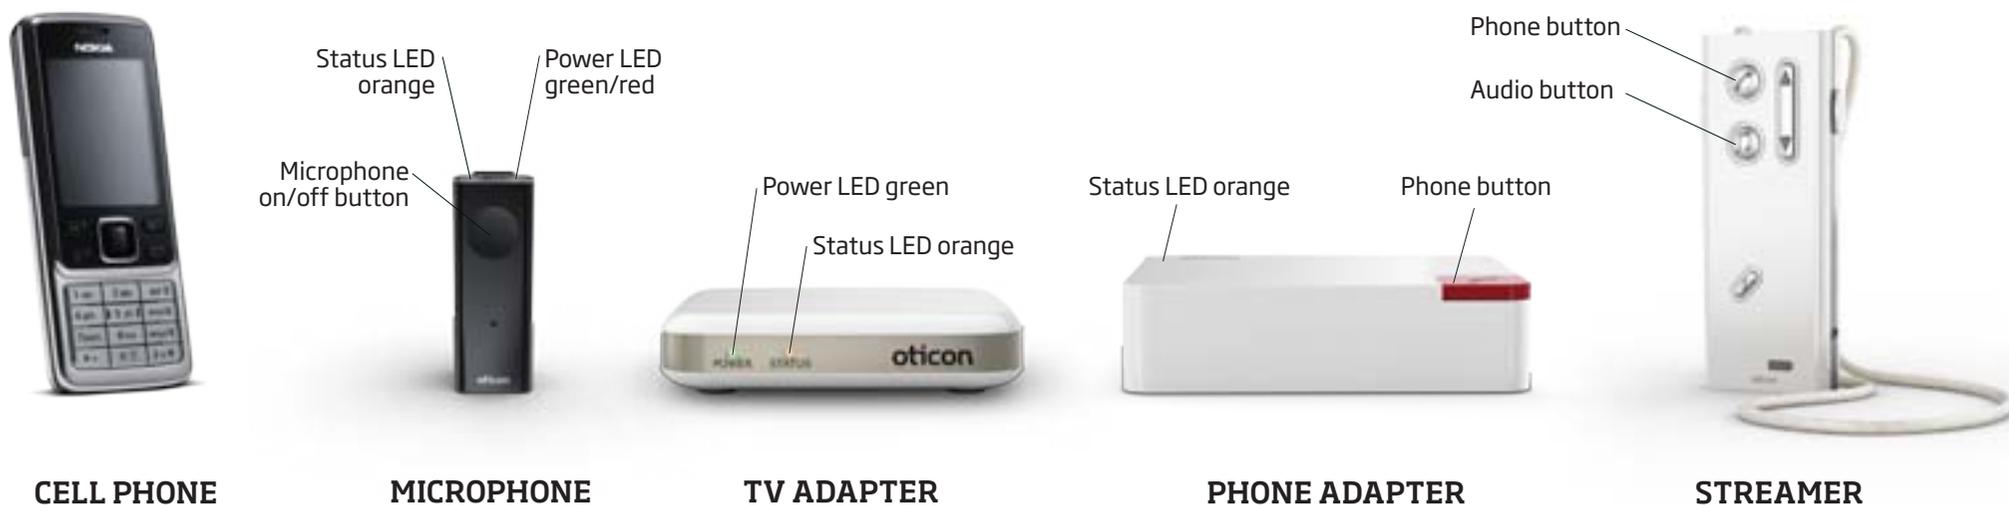

PUSH BUTTON OVERVIEW STREAMER 1.4

Bluetooth off - HI's on (remote)				
External event	Key press	Action	LEDs	HI - sound
	Streamer volume up /down short	Volume up/down Hearing Instrument		Volume "tick"
	Streamer volume up /down long	Program shift Hearing Instrument		Program shift confirmation beep
	Streamer audio button Short, long or double press	Will start bluetooth and establish connection (see following sections of this document)		
	Streamer connect button short press	Turns on Bluetooth	Connect/Bluetooth LED on for 3 seconds then fades to indicate BT on	
Mini jack connected	Audio button - short press	Start/stop audio streaming	Streamer Audio button steady orange/off	Program shift confirmation beep

PUSH BUTTON OVERVIEW STREAMER 1.4

Bluetooth on, and paired device in range / connected				
External event	Key press	Action	LEDs	HI - sound
	Audio button short press (if TV adapter paired)	Connects to TV Adapter	LED on TV Adapter steady orange Audio button on Streamer steady orange	Audio button confirmation "tick" program shift confirmation beep
	Audio button double press (Microphone paired)	Connects to ConnectLine Microphone	Audio button LED orange	Audio button confirmation "tick" program shift confirmation beep
	Audio button long press (If device paired)	Connects to Audio Device	Audio button LED orange	Audio button confirmation "tick" Program shift confirmation beep
	Audio button short press	Stops streaming for any of the above		
Phone adapter not connected	Phone button short press	Voice dial on Cell Phone ¹⁾	Phone button LED constant green	Program shift confirmation beep
	Phone button long press	Last number redial on Cell Phone	Phone button LED constant green	Program shift confirmation beep
Phone adapter connected	Phone button short press	Picks up phone line	Phone adapter LED changes from constant red to blinking red Streamer Phone button constant Green	Program shift confirmation beep. Phone line dial tone
	Phone button long press	As above		
Cell Phone rings			Phone button LED green flashing	Call indication
Cell Phone rings	Phone button short press	Answer call	Phone button LED constant green	Program shift confirmation beep
Cell Phone rings	Phone button long press	Reject Call		
Landline Phone rings			Phone button LED green flashing	Call indication
Landline Phone rings	Phone button short press	Answer call	Phone Adapter LED changes from constant to blinking red	program shift confirmation beep

¹⁾ If supported by cell phone

PUSH BUTTON OVERVIEW STREAMER 1.4

On the phone (cell phone)				
External event	Key press	Action	LEDs	HI - sound
	Phone button Long press	Transfer call to/from cell phone		Program shift confirmation beep
	Volume up/down short press	Volume phone up/down		Volume "tick(s)"
	Volume up/down long press	H.I. microphone mute/un-mute		Program shift confirmation beep
	Phone button short press	Disconnects (ends) call Resumes previous Audio Connection if applicable	Phone button LED changes from green to off Audio button LED constant orange	Program shift confirmation beep
	Bluetooth/connect long press	Turns Bluetooth off		

On the phone (landline) / ConnectLine Phone				
External event	Key press	Action	LEDs	HI - sound
	Volume up/down long press	H.I. microphone mute/un-mute		Program shift beep
	Volume up/down short press	Volume phone up/down		Volume "tick(s)"
	Phone button short press	Disconnects (ends) call Resumes previous Audio Connection if applicable	Phone button LED changes from constant green to off. Phone Adapter LED changes from blinking to constant red Audio button LED constant orange	Program shift confirmation beep
	Bluetooth/Connect long press	Turns Bluetooth off		

PUSH BUTTON OVERVIEW STREAMER 1.4

Connected to TV / ConnectLine TV (or other Audio source)				
External event	Key press	Action	LEDs	HI - sound
Cell Phone rings			Phone button LED flashes green	Call indication and TV sound at- tenuated
Cell Phone rings	Phone button short press	Answer call	Phone button LED constant green	Program shift confirmation beep
Cell Phone rings	Phone button long press	Reject Call	Phone button from flashing green to off	Confirmation beep and TV sound resumes level
Landline Phone rings			Phone button LED flashes green	Call indication
Landline Phone rings	Phone button short press	Answer call	Phone button LED steady green Phone Adapter LED changes from constant red to blinking red	program shift confirmation beep

PUSH BUTTON OVERVIEW STREAMER 1.4

ConnectLine Microphone				
External event/state	Key press	Action	LEDs	HI - sound
Microphone off	Microphone short press	Turns on Microphone and connects to Streamer	Microphone power LED constant green and status LED orange Streamer Audio button LED orange	Program shift confirmation beep
	Microphone long press	Pairing mode	Microphone status LED flashing Orange rapidly	
Microphone on and not connected			Microphone power LED constant green	
	Microphone on/off button short press	Starts streaming	Microphone status LED constant orange Streamer Audio button LED constant orange	Program shift confirmation beep
	Streamer Audio button double key press	Starts streaming	Microphone status LED orange Streamer Audio button LED orange	Program shift confirmation beep
Microphone on and connected			Microphone power LED constant green and status LED constant orange. Streamer Audio button LED constant orange	
	Microphone on/off button short press	Pauses streaming from Microphone	Microphone status LED turns off Streamer Audio button LED turns off	Program shift confirmation beep
	Streamer Audio button short press	Pauses streaming	Microphone status LED turns off Streamer Audio button LED turns off	Program shift confirmation beep
Cell Phone rings			Phone button LED flashes green	Call indication
Cell Phone rings	Phone button short press	Answer call	Phone button LED steady green	Program shift confirmation beep
Cell Phone rings	Phone button long press	Reject Call		
Landline Phone rings			Phone button LED flashes green	Call indication
Landline Phone rings	Phone button short press	Answer call	Phone button LED steady green Phone Adapter LED changes from constant red to blinking red	Program shift confirmation beep

PUSH BUTTON OVERVIEW STREAMER 1.4

Miscellaneous / system				
External event	Key press	Action	LEDs	HI - sound
	Bluetooth + Volume up very long (10 secs, no key-lock)	Clear all pairings in Streamer	After approx 10 secs backlight flashes 4 times	
	Phone button very long press (10 secs)	Resets Streamer	Bluetooth/Connect, Audio and Phone button LEDs lights up for 2 secs	
	Bluetooth very long press	Puts Streamer in pairing mode	Bluetooth/Connect button LED flashes rapidly	Soft "tick"
	Key lock on + Volume up and Volume down simultaneously (6 secs)	Displays Streamer Version	Backlight flashes for Streamer version. 5 flashes for Steamer 1.4	
	Key lock on		Bluetooth/Connect button LED off, rest dimmed to 25%	
	Phone adapter, Phone button long press (6 secs)	Pairing mode	Phone Adapter LED flashes rapidly - changes to constant RED when paired and connected to Streamer	
	Microphone on/off button long press	Microphone in pairing mode	Microphone LEDs on, then off, then orange LED flashing rapidly	
Phone Adapter and Streamer out of range (not connected)			Phone Adapter LED fades red	